




DPI Rustic Planking - Installation Instructions

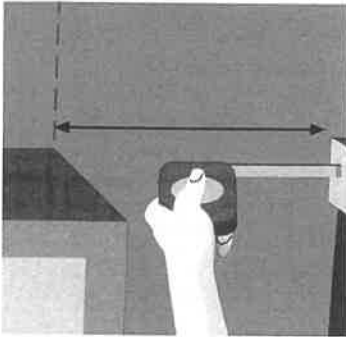


Measure wall space to determine how much DPI planking will be needed - allowing for a little extra

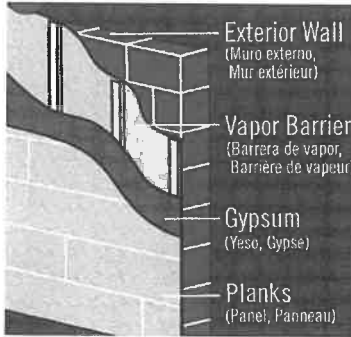


Prepare solid walls - exterior or below grade should have a 4-mil polyethylene vapor barrier installed

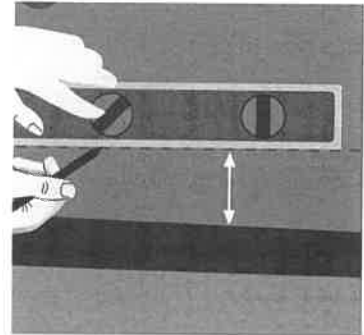

Use a bubble level to draw a horizontal line on the wall - this will be your level reference line

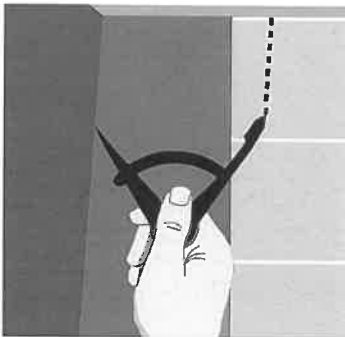


Tip - before trimming end planks, transfer wall mis-alignment by using a compass to mark the angle & trim

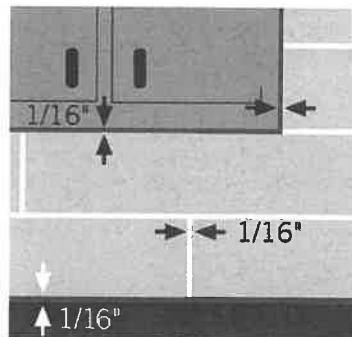


Be sure to allow a gap between planks, and alongside cabinets, counters, window and door frames




Cut planks face up if using a hand saw - face down if using a power saw - this helps avoid rough edges

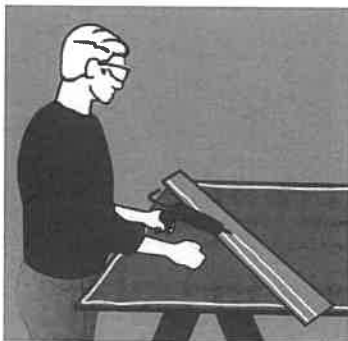

Use caulking gun to apply 1/4" beads of *Power Grab* adhesive, half inch from top and bottom edges - Apply 3 evenly spaced beads the full width of plank

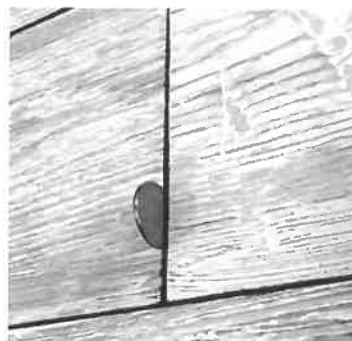

Immediately apply the plank to wall - press firmly in place - allow a gap between planks about the thickness of a quarter - this is for seasonal expansion

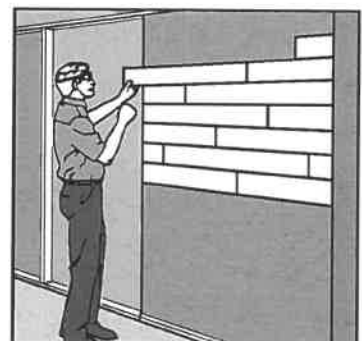

Continue to apply the planks according to your wall layout - (a random "staggered" pattern gives a very attractive outcome) - finish with moldings